

Installation description

1, Lift up engine hood

2, Start installation of H8 LED Bulb.
Please ensure all electrical switches
are turned off.

3, Check the position of Dust
Damper of H8 Lamp Fixture

4, Use slot screw driver to
open the Dust Damper
carefully

5, Lift open the Dust Damper
carefully

6, Check position of H8 Bulb

7, Take out H8 Bulb

 
8, Release the catches of H8 Bulb
Connector at both sides

9, Pull out H8 Bulb Connector

10, Check the position of
lamp base.

11, Take out H8 LED Bule
carefully

12, Clamp the handle of lamp
base

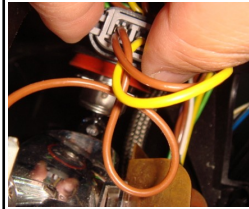

13, Put the lamp fixture into the
lamp base

 
 
 
 
14, Check the lamp base and
position properly

15, Turn H8 LED to fit into
position

16, Connect LED to power
control box

17, Connect Connector

18, Search for carefully and
install power control box

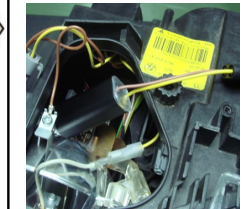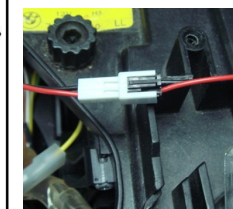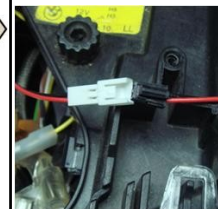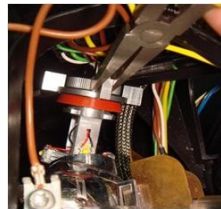

19, Connect auto lamp bulb
connector to the power control
box connector

 
20, When fitting in, check the
colors of wire and insert in pairs.

21, Fit the connector firmly ;

22, Sort out the wires and
place properly

23. Fine-tune the LED fixing position:
(Refer to the Supplementary
explanation to Page 2.)

24, Test by light up the lamp bulb

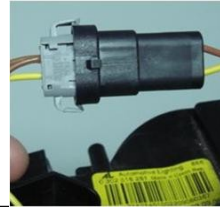

25, When the operation is tested
to be working normally, cover up
the dust damper

 
26, Press the Dust Damper and let
it caught up.

27, When both side of lamp is installed with H8 LED Bule, cover up the engine hood.




23, Fine-Tuning of LED Fixing Position (Supplementary Explanation of Page 2)

a). Insert H8 LED Bule into lamp cup vertically.

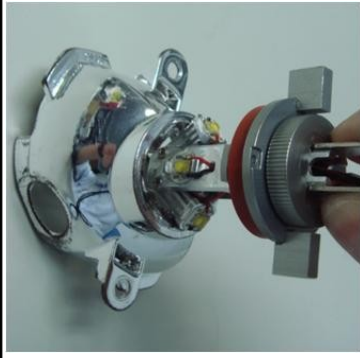

 b). Push H8 LED Bule down to the bottom.

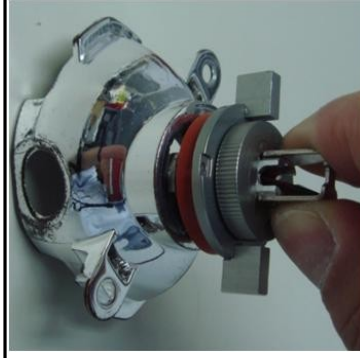

c). Check H8 LED Bule for fitting into the positioning slot of Lamp Cup.



 
d). Hold LED Bule Base Handle and turn to fixed position.



e). Rotate LED Bule to position but LED light source position is not at proper position.




f). Turn the rotating table (at the straight line embosing)

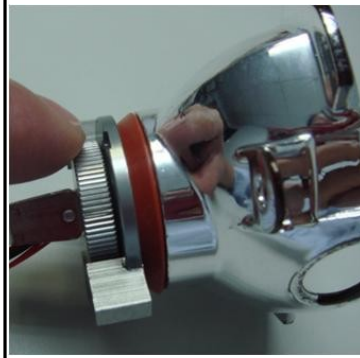


g). Turn and adjust LED Bule to the light source position and fix (Front view)



 
h). Turn and adjust LED Bule to the light source position and fix it (side view)

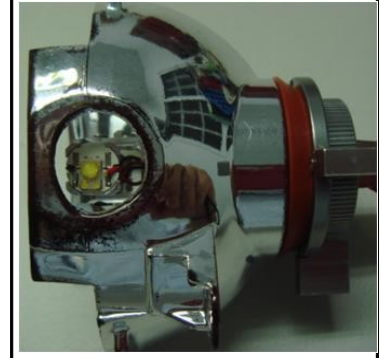

 i). After positioning LED Bule light source correctly, pull up or bend down the fixing handle to fix it.

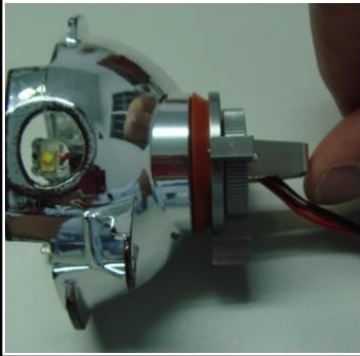

 j). Fix the position by pulling up or bending down the fixing handle.

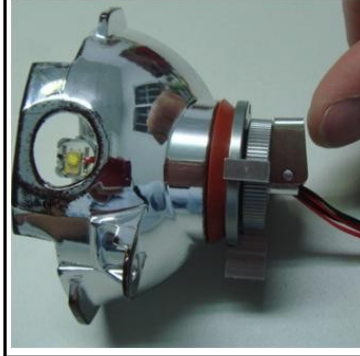

i). After the LED Bule light source position is fixed. .



k). H8 LED Blue Lamp is on.

