





1. Remove the original radio, and take the screws out as marked in picture




2. Take the original radio frame out from the car

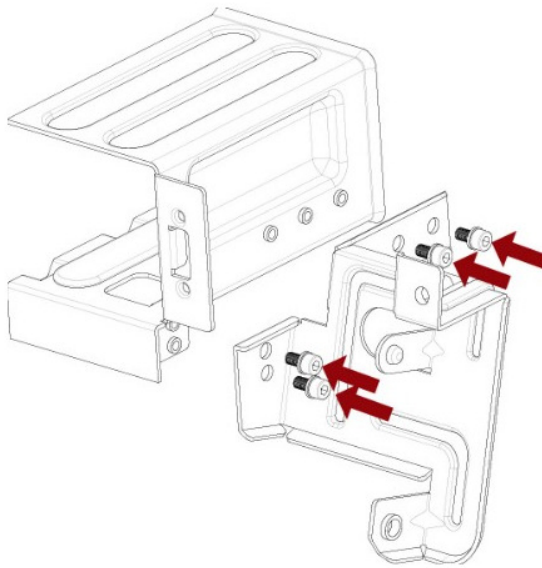

3. make the 2 parts above together

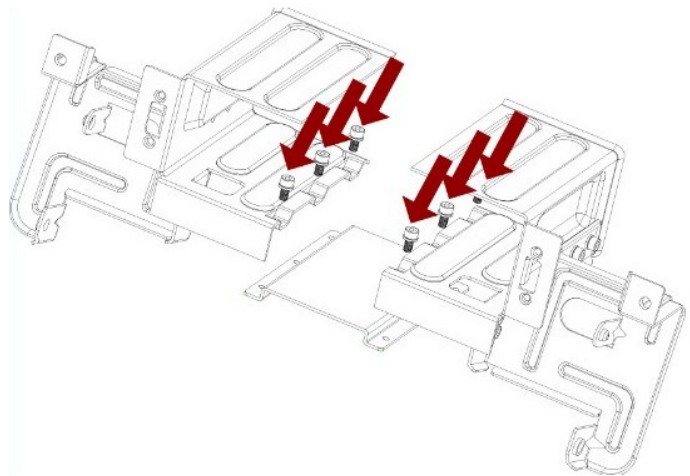

4. Fix the 2 parts in the car ,then connect them by the sheet metal

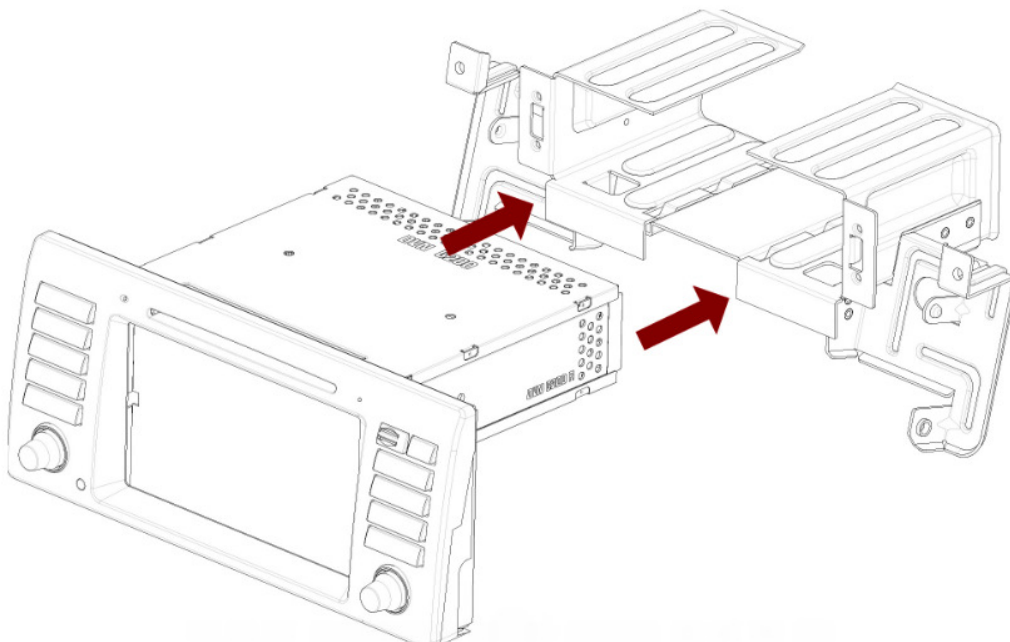

5. Take the head unit inside