


Manual of easy type X5(E53) step board

1. Because our boards are shorter than original plastic plates, you must measure averagely for the middle position of both sides.

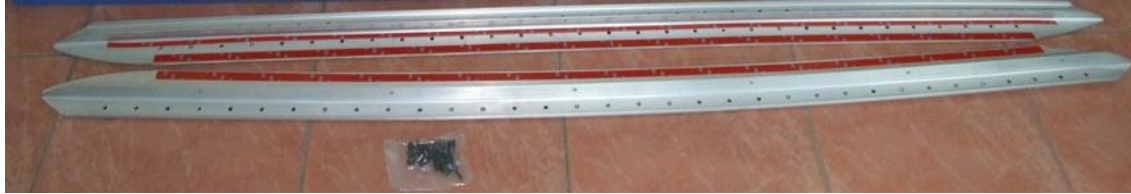

2. Because there is no hole on plastic plate of your car, you have to drill it by yourself. Before that, please use 3M tape on the back side of board to stick & make sure the board on the right position to avoid any move while drilling.



3. There are reserved 11 holes positions on each board. But please use crosshead ratchet wrench to lock tight the screws, don't use normal screwdriver or lines which might cause the screws be worn.





4. Both front and back sides need to be locked. There will be 22~24 screws enclosed, and then the installation is done.

